

## **ALUMINUM JULIET BALCONY-SIDE MOUNT**


## **COMPONENT OVERVIEW**

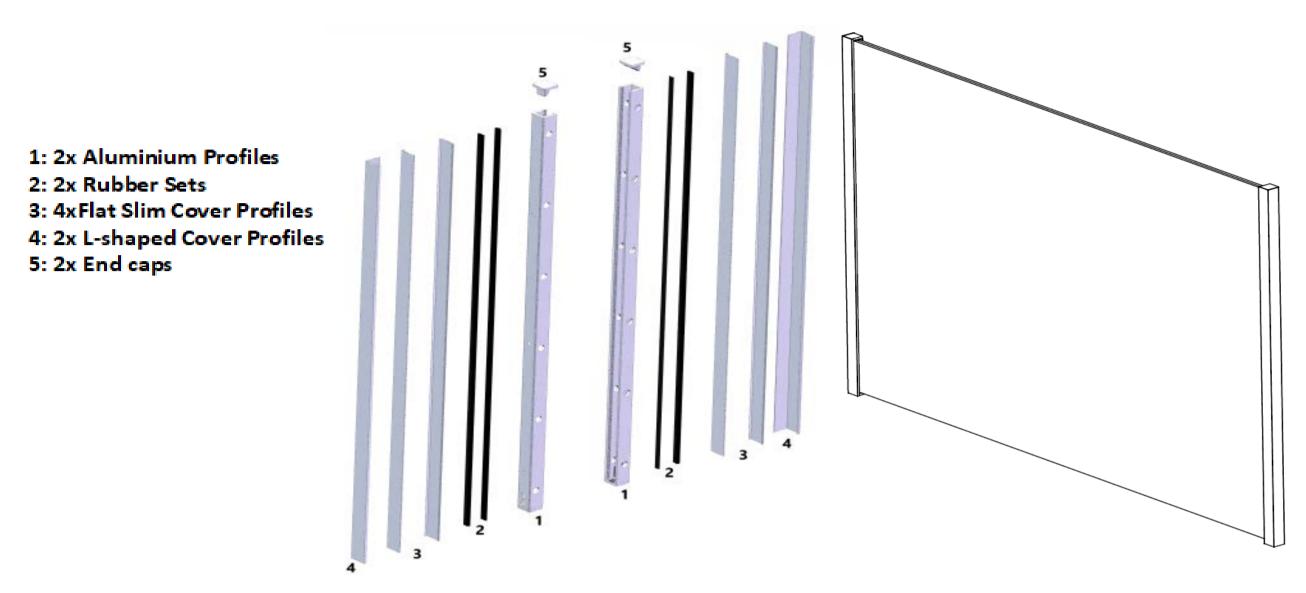

**Step 1.** Use drill bit to predrill holes for drop in anchors or screws (depending on the substrate), fix the aluminum profile to the wall.

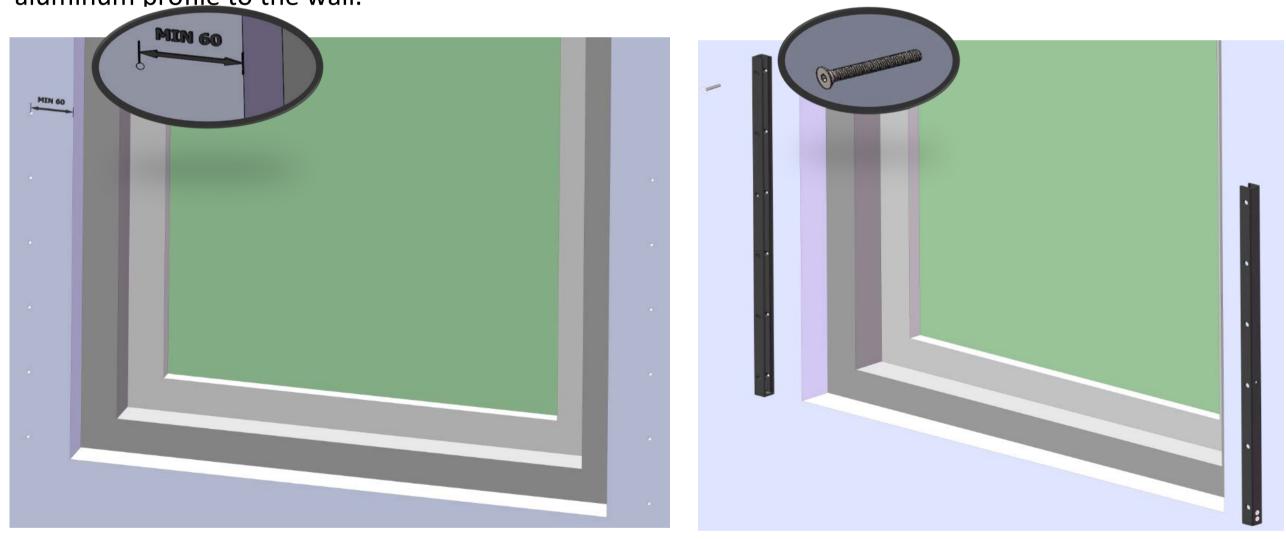


**Step 2.** Install the L shape cladding onto the aluminum profiles.

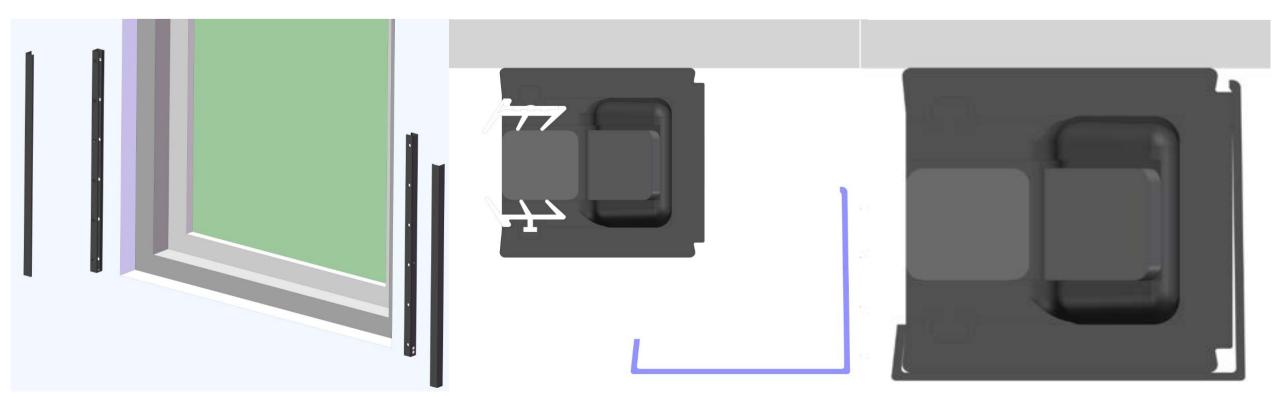


## **ALUMINUM JULIET BALCONY-SIDE MOUNT**

**Step 3.** Install the outer glass sealing strip and then install the glass panel.

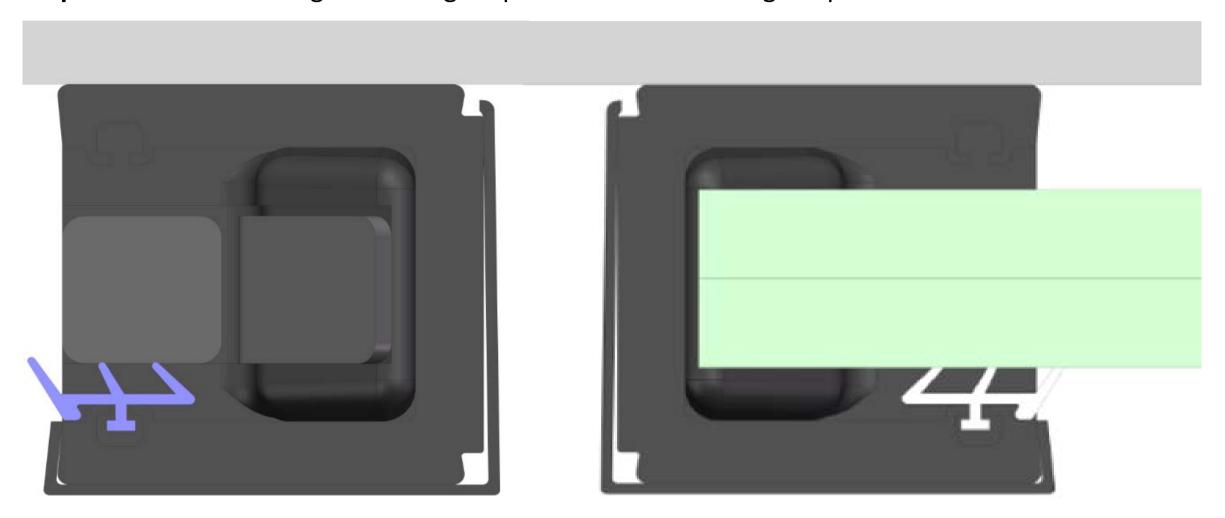

**Step 4.** Install the inside glass sealing strip.

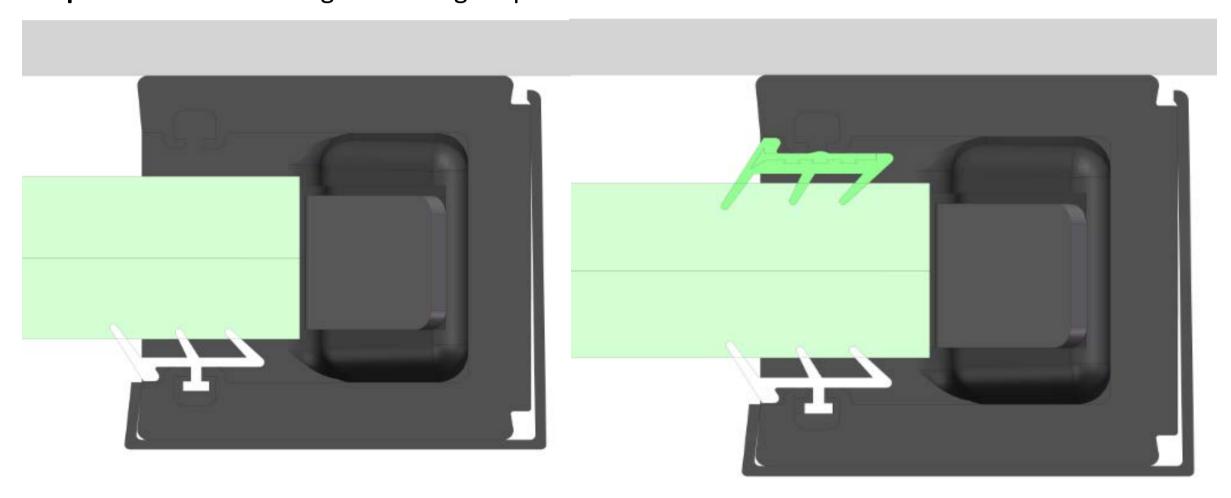

**Step 5.** Install the end cap.

